



Connect other side of Microswitches and Push Buttons to COM

B Coin Microswitch
 A Coin Microswitch
 Time Switch

Pause Button
 PGM**
 Run Button

Delete*

****Programming**

1. Push and hold the program switch (PGM)
2. Input the number of balls (B Microswitch)
3. Input the number of coins (A Microswitch)
4. Input the time - Each input adds 5 min. (Time Switch)
5. Release the program switch

***Deleting a Game**

Push both the Run and Pause buttons at the same time

